


- 1) Ensure the meter is de-pressurized.
- 2) If the meter is not installed in the pipeline, adjust the meter so it is placed in the same orientation as if it were installed in the pipeline.
- 3) Either remove one plug, sight glass, or fill screw above the lowest sight glass.
- 4) Fill the meter with meter oil half way up the lowest sight glass.
- 5) Replace your plug. Sight glass or fill screw.

Warning: If the meter is not installed in the recommended position, oil level may be improper.

For 8C175 A Series meters, “gear end” and “counter end” must be in the proper positions. Refer to illustrations below for position confirmation.

Gear End

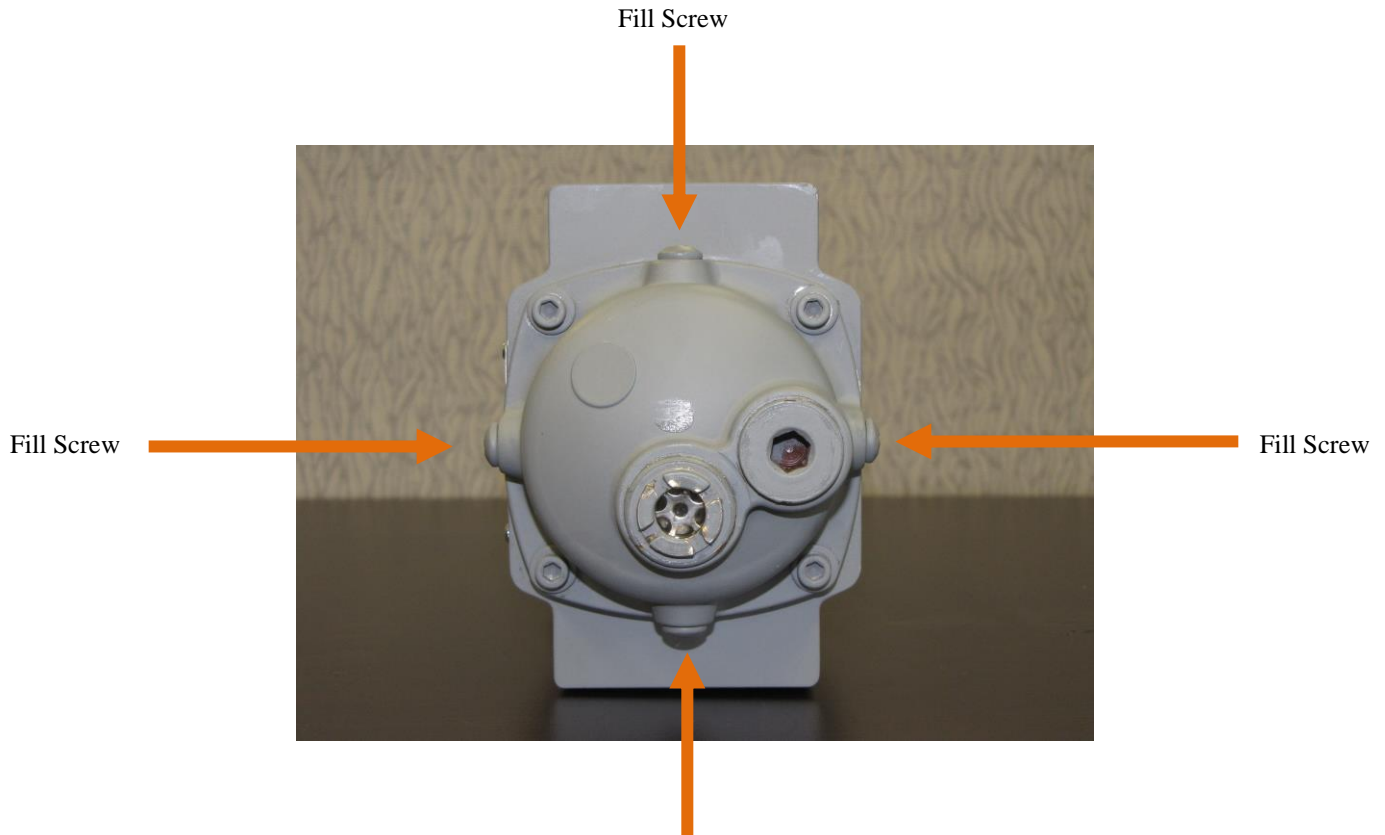

Counter End



Position 1: Opposite of Normal/
Vertical Up



Position 3: Upside Down Horizontal/
Right to Left



Position 2: Horizontal/Left to Right



Position 4: Normal/Vertical Down

